



HP iPAQ rx3000 series

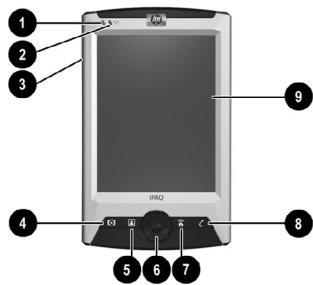

Front Panel Components

- 1. Charge/Notification LED indicator:**
LED off = not charging or no notifications
Amber flash = charging
Green flash = one or more notification events have occurred
Amber solid = charging complete
- 2. Wireless LED indicator:**
LED off = Bluetooth and Wi-Fi are off
Blue solid = Bluetooth and/or Wi-Fi are on
- 3. Image Capture Button*:** Short press launches HP Photosmart Camera, then another press captures a picture. A long press and hold launches voice recorder
- 4. iPAQ Mobile Media Button:** Opens iPAQ Mobile Media that allows you to listen to music and view photos and videos
- 5. HP Image Zone Button:** Opens HP Image Zone that allows you to view, edit and print images
- 6. 5-Way Navigation Touch Pad:** Controls special functions for various applications
- 7. Nevo Universal Remote Button:** Opens Remote Control that controls home entertainment devices
- 8. iTask Button:** Provides single-button access to open applications and settings
- 9. QVGA Color Display:** High contrast color screen

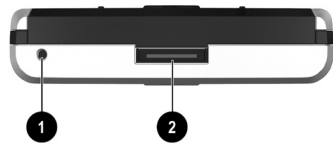

Bottom Panel Components

- 1. Reset Button:** Push the stylus into this hole for a soft reset, which restarts your HP iPAQ without erasing any data
- 2. Universal Connector:** Connects to HP iPAQ cradle, AC adapter and USB synchronization cable



Top and Back Panel Components

- 1. Stylus:** Use to input information. Slide up to remove, slide down to put back in place
- 2. Secure Digital Expansion Slot:** Supports Secure Digital (SD) and MMC memory cards and SDIO expansion cards
- 3. Power Button:** Turns HP iPAQ on and off
- 4. 3.5mm Stereo Headphone Jack:** Supports standard 3.5mm headphones
- 5. Mirror*:** Center yourself in the mirror for a self-photo and press Image Capture Button to take your picture
- 6. Digital Camera Lens*:** 1.2 mega pixel HP Photosmart Camera
- 7. Battery Cover Release Latch:** Unlatch to install or remove the rechargeable battery



HP Desktop Cradle (rx3700)

Connects to the HP iPAQ for charging and/or synchronizing and serves as a recommended home for your HP iPAQ when it is not in use



USB Synchronization Cable (rx3100 and rx3400)

Connects the HP iPAQ to a PC for charging and/or synchronizing. When the HP iPAQ is not in use, the cable is used to maintain a charged battery

***NOTE:** The built-in HP Photosmart camera is available only in select HP iPAQ models. To upgrade your model, please refer to the Accessories Brochure for information on the HP Photosmart Mobile Camera.

Learning more about the HP iPAQ

for information on...

see this source...

Using your HP iPAQ	HP iPAQ rx3000 series Mobile Media Companion User's Guide located on the Companion CD. For on device help, tap Start , then Help .
iPAQ Mobile Media and Digital Imaging Features*	Special Features Guide
Bluetooth and Wi-Fi Connections	HP iPAQ rx3000 series Mobile Media Companion User's Guide located on the Companion CD.
Additional programs that can be installed on your HP iPAQ	Companion CD
Updates on Windows Mobile devices	http://www.hp.com/support
Safety precautions	Important Safety Information document on the Companion CD
Global limited warranty	Global limited warranty and technical support document in the box
HP iPAQ accessory products	Accessories information brochure included with your HP iPAQ and on the Companion CD, or http://www.hp.com/go/ipaqaccessories
Support for your HP iPAQ	http://www.hp.com/support
Worldwide telephone support phone numbers	http://www.hp.com/country/us/eng/wwwcontact.html
Registering your HP iPAQ to receive e-mail from HP regarding special offers and promotions	http://www.register.hp.com

NOTE: This is a Class B digital device, pursuant to Part 15 of the FCC Rules. Refer to the *User's Guide* on the Companion CD for Class B information.

NOTE: Depicted devices may vary from actual product. All products are not available in all regions.

***NOTE:** The built-in HP Photosmart camera is available only in select HP iPAQ models. To upgrade your model, please refer to the Accessories Brochure for information on the HP Photosmart Mobile Camera.

© 2004 Hewlett-Packard Development Company, L.P.
Microsoft, Windows, the Windows logo, Outlook and ActiveSync are trademarks of Microsoft Corporation in the U.S. and other countries.

HP iPAQ Mobile Media Companion is Powered by Microsoft® Mobile™ 2003 Software for Pocket PCs.
Second Edition, August 2004.
Printed in Taiwan



364355-002

Getting started


HP iPAQ rx3000 series Mobile Media Companion





Do not connect the HP desktop cradle or USB synchronization cable to your PC until the Setup Wizard on the Companion CD instructs you to do so.

1 Install the battery

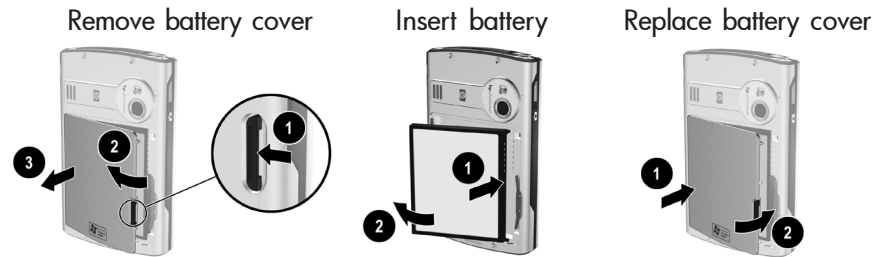

NOTE: The built-in HP Photosmart camera is available only in select HP iPAQ models.


2 Charge the HP iPAQ

Connect the AC adapter to the HP iPAQ to charge it.

NOTE: It takes about 4 hours to fully charge the unit.



NOTE: Plugging in the AC adapter turns on the HP iPAQ. If the unit does not turn on, lightly press the Reset button on the bottom of the unit.

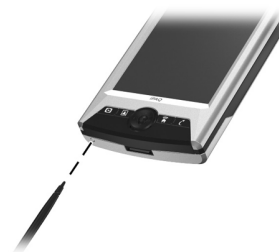

3 Power on

Press the Power Button to turn on the unit.



4 Device setup

When the HP iPAQ screen displays, tap the screen, then follow on-screen instructions until setup is complete.

5 View On-screen Device Demo

The demo shows the features of your new HP iPAQ. It only runs once, but you can replay it from the Programs folder. Click the at the bottom of the screen to skip the demo.

6 Insert Companion CD into your computer


Insert the Companion CD into your computer and click **Start Here**. Follow the on-screen instructions. The Setup Wizard installs:

- Microsoft Outlook
- ActiveSync 3.7 (or greater)
- Various other software applications

If you want to skip the introduction demo on your Companion CD, click **Skip Introduction**.

7 Connect the HP iPAQ to your computer when instructed by the Setup Wizard on the Companion CD

a) rx3700 series: Connect the end of the USB connector to the USB port on your computer. Insert the HP iPAQ into the HP desktop cradle, and then connect the AC adapter to the cradle.

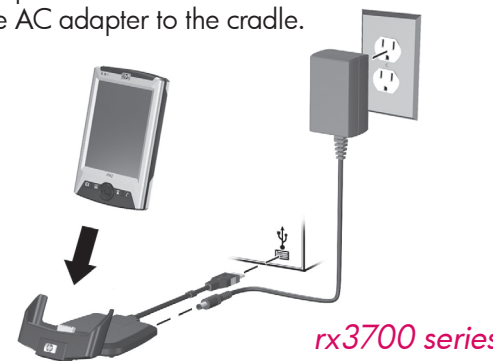

b) rx3100 and rx3400 series: Connect one end of the USB sync cable to your computer and the other end to the HP iPAQ. Connect the AC adapter to the USB sync cable to continue charging it.



8 Establish a partnership

Follow the ActiveSync instructions on your computer to establish a connection between your HP iPAQ and computer.




Use ActiveSync to synchronize your calendar, tasks, contacts, e-mail messages, and Web favorites between the HP iPAQ and your computer.

To view Help Topics, open ActiveSync and click **Help**.

Launch page

When you turn on your HP iPAQ for the first time each day (or after 4 hours of inactivity), you see the launch page. You also can display it by tapping and then **Today**.

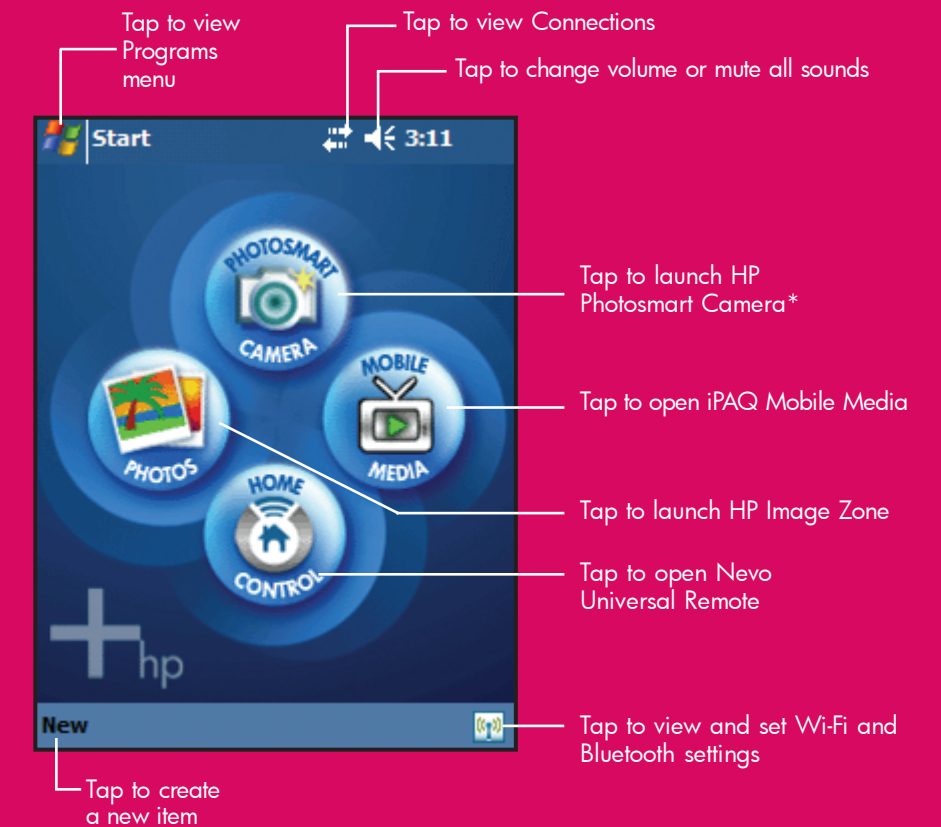

***Note:** The built-in HP Photosmart camera is available only in select HP iPAQ models. To upgrade your model, please refer to the Accessories Brochure for information on the HP Photosmart Mobile Camera.